






How to replace a cabin air filter on Peugeot 206 CC (2D)

 VIDEO TUTORIAL

Important!

This replacement procedure can be used for:
PEUGEOT 206 CC (2D) 1.6, PEUGEOT 206 CC (2D) 1.6 16V, PEUGEOT 206 Hatchback (2A/C) 1.6, PEUGEOT 206 Hatchback (2A/C) 1.6 16V, PEUGEOT 206 Hatchback (2A/C) 1.6 Flex, PEUGEOT 206 Saloon 1.6 16V, PEUGEOT 206 SW (2E/K) 1.6, PEUGEOT 206 SW (2E/K) 1.6 16V, PEUGEOT 206 SW (2E/K) 1.6 Flex, PEUGEOT 206 SW (2E/K) 1.6 LPG, PEUGEOT 207 SW (WK_) 1.6

The steps may slightly vary depending on the car design.

AUTODOC recommends:

- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1



Open the bonnet.

2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3



Remove the cabin filters.

AUTODOC recommends:

- Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.

4



Install the cabin filters.



AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Follow the air flow direction arrow on the filter.
- Take care to only use quality filters.

5



Remove the fender protection cover.

6



Close the hood.

DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES

NO



BECOME A MEMBER OF AUTODOC CLUB!

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR





BUY SPARE PARTS FOR VOLKSWAGEN


INTERIOR AIR FILTERS: A WIDE SELECTION





CHOOSE CAR PARTS FOR PEUGEOT 206 CC (2D)
206

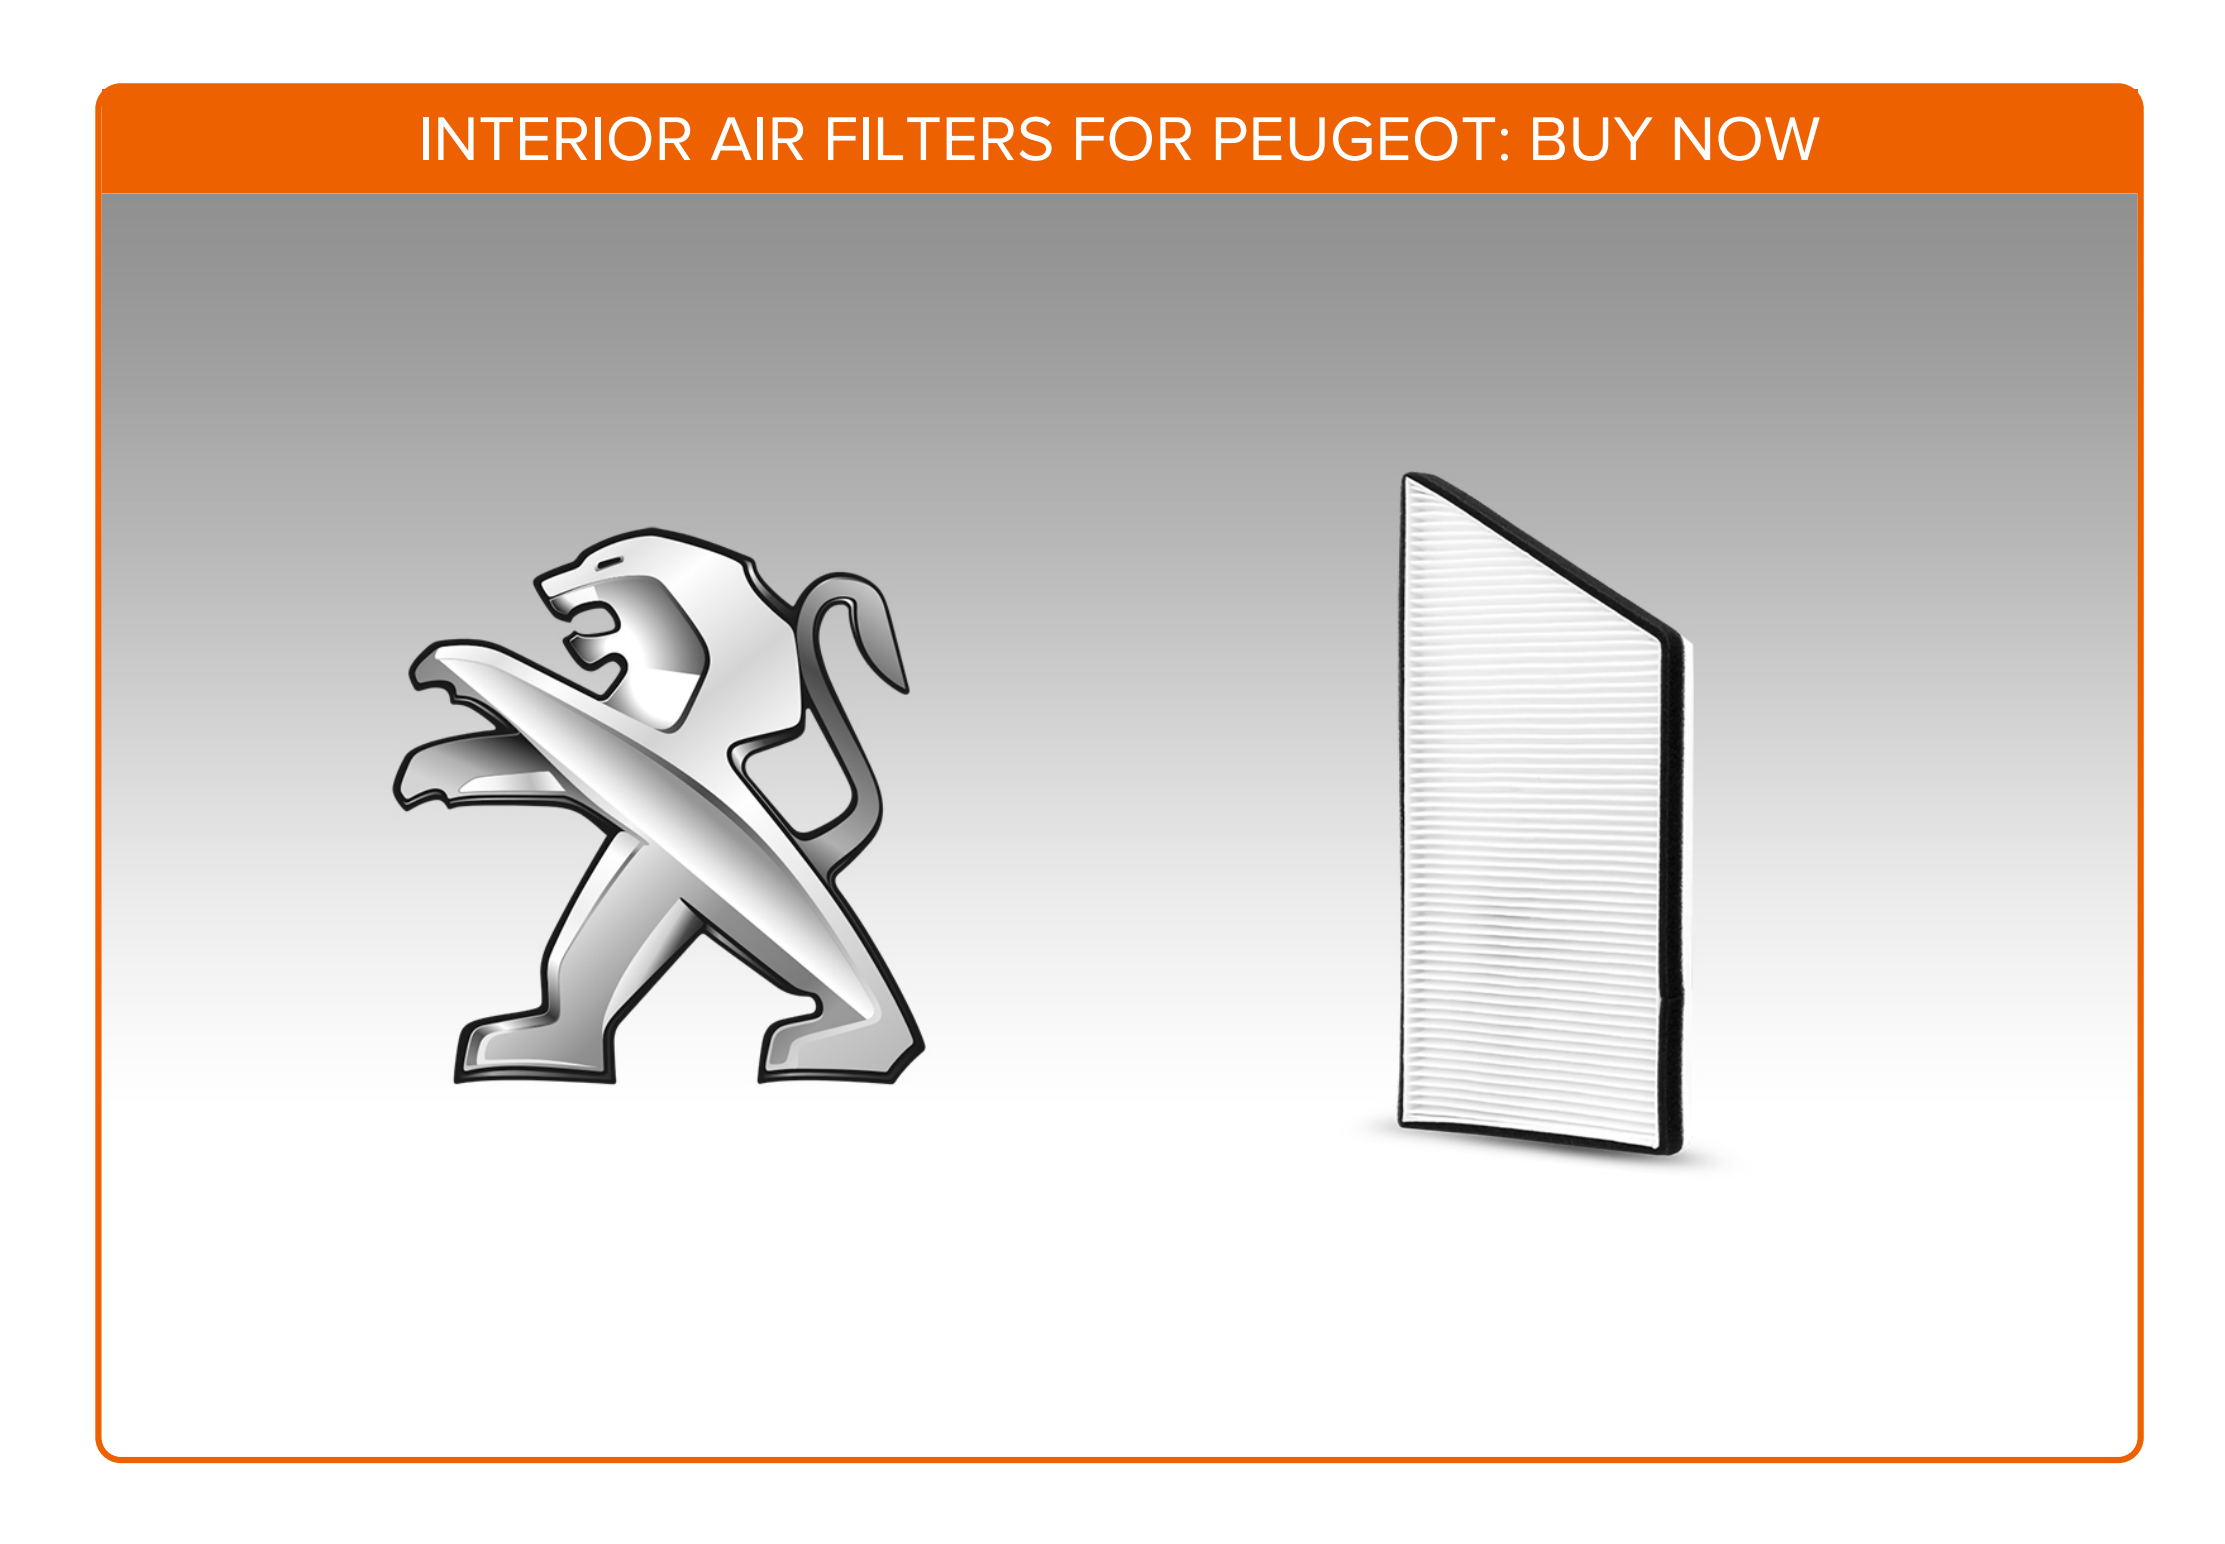
INTERIOR AIR FILTERS FOR PEUGEOT: BUY NOW



INTERIOR AIR FILTERS FOR PEUGEOT 206 CC (2D): THE BEST DEALS & OFFERS

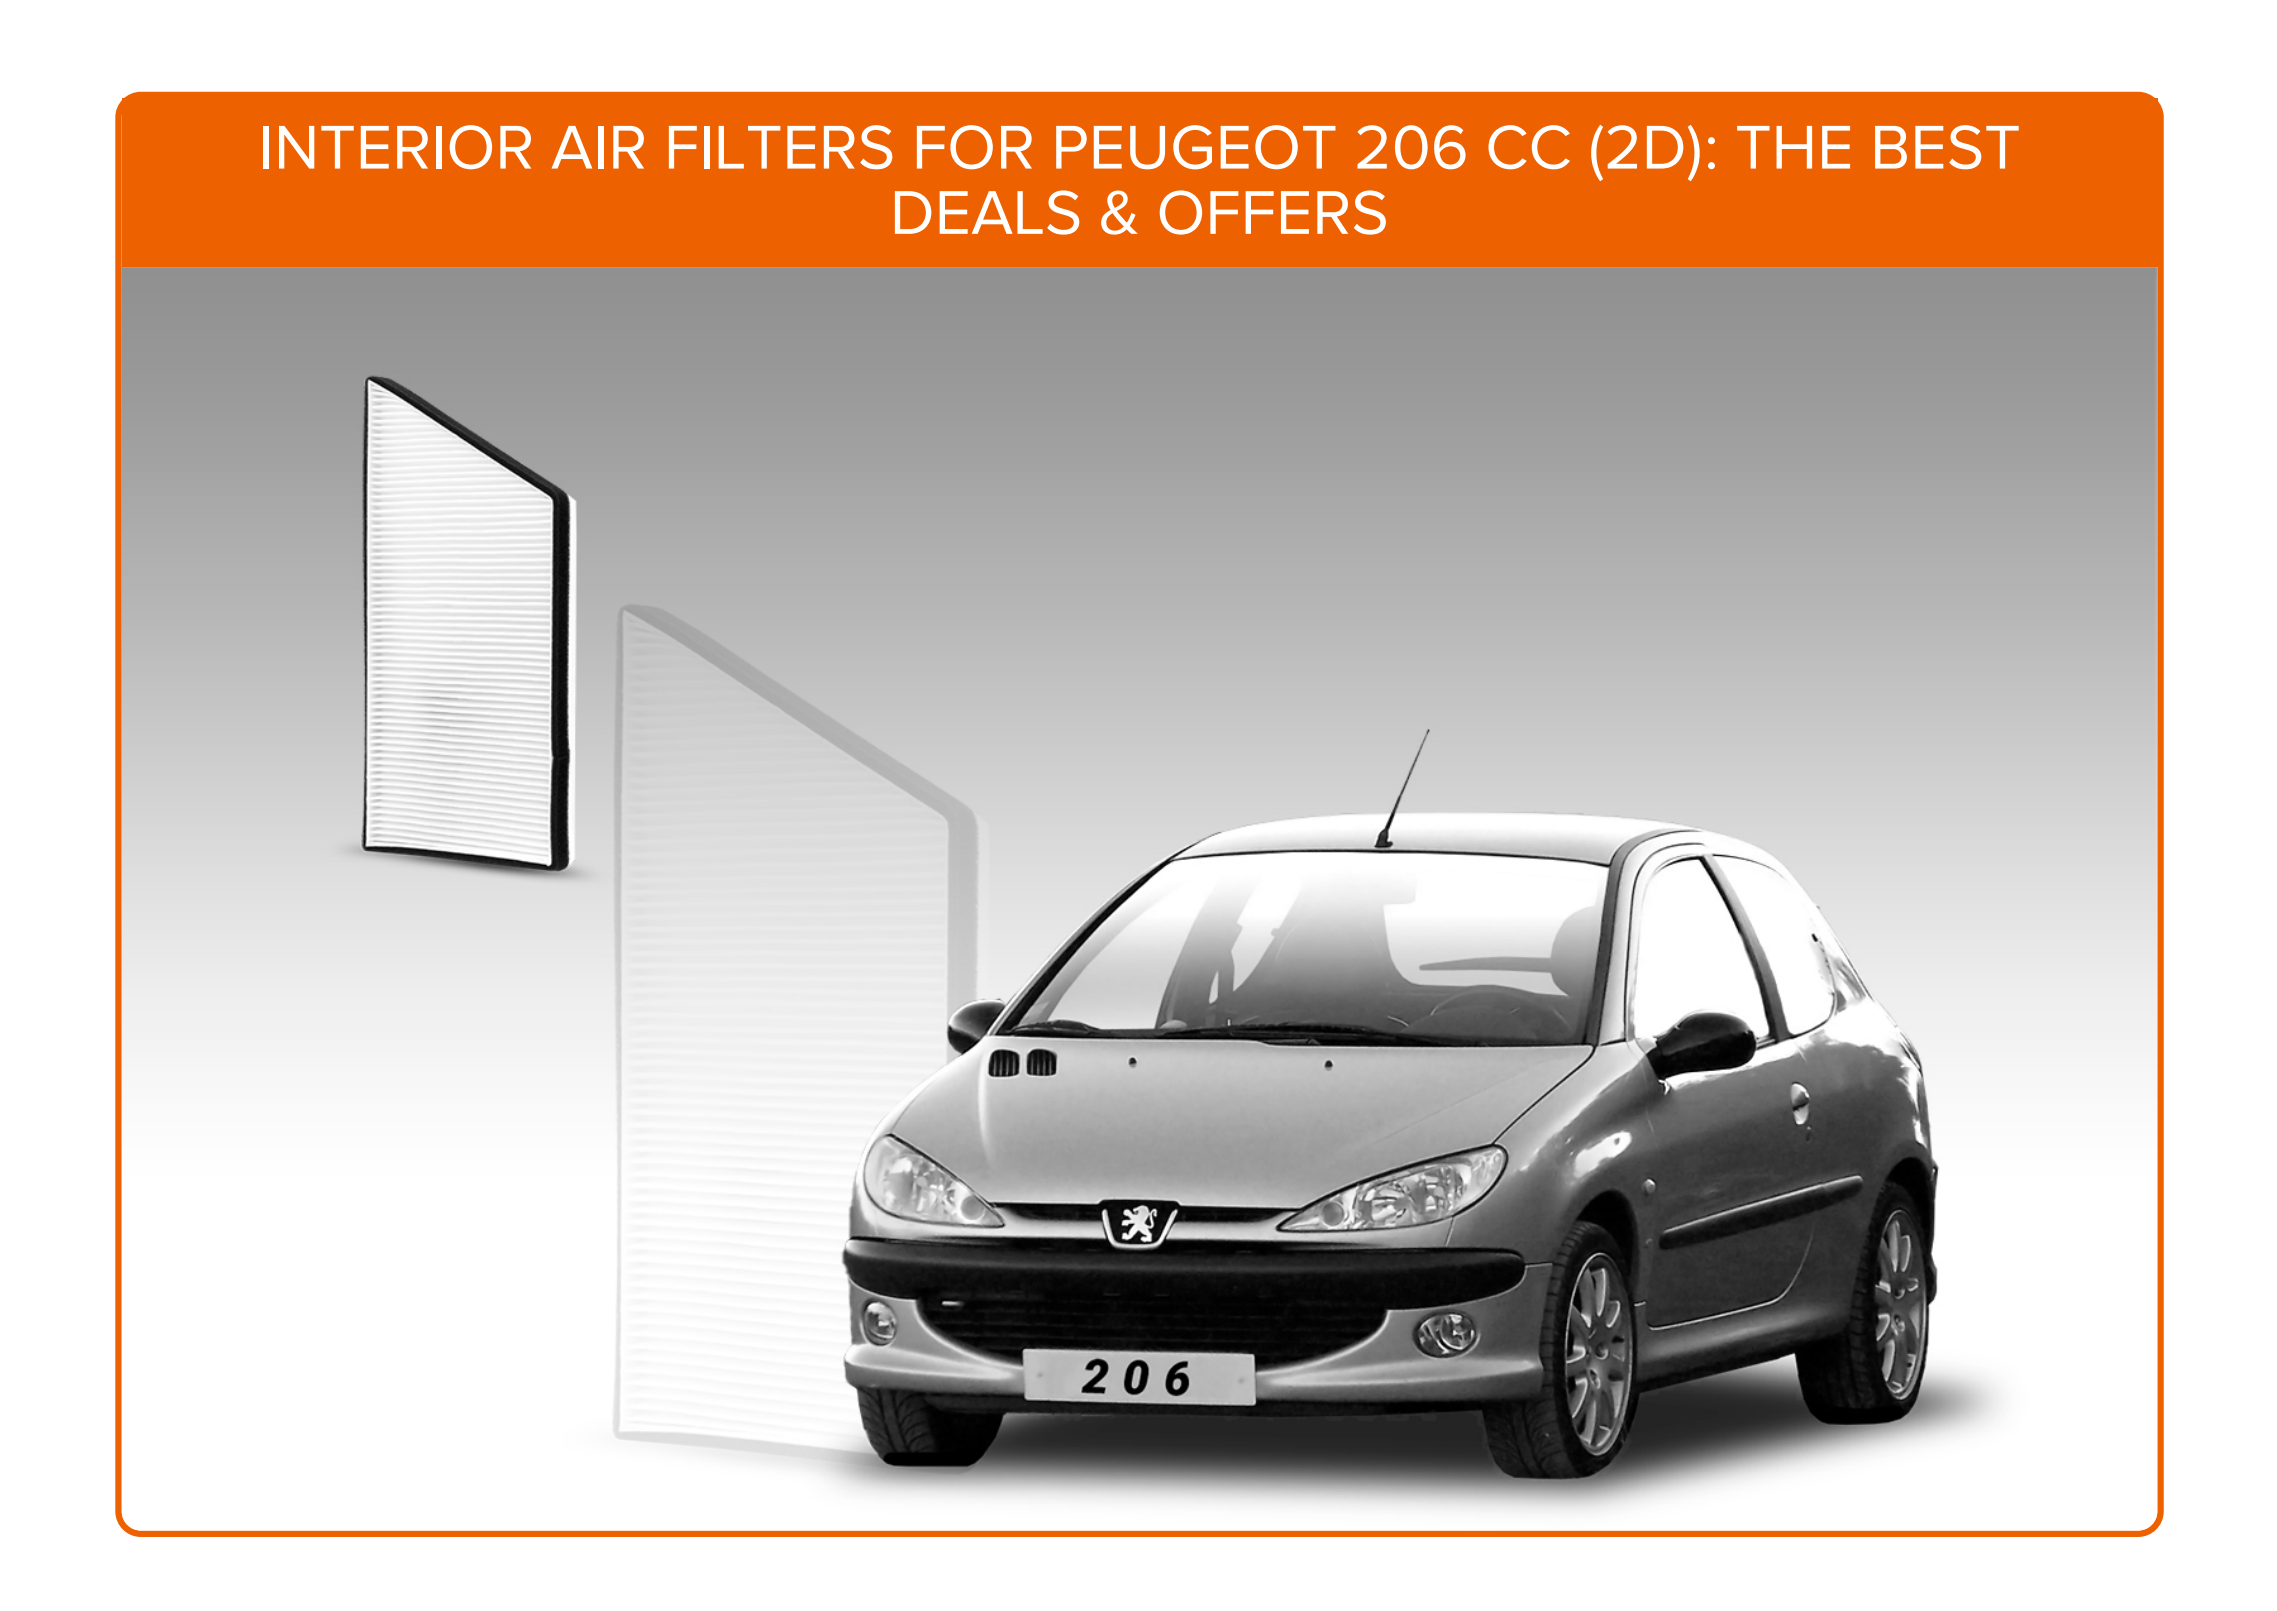

Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.